

Step-by-Step Instructions

(PRINT this set of instructions, to follow every time you reset the chips on your canon cartridges.)

How to use the chip resetter for the Canon PGI-5BK Black / CLI-8 Color Cartridges

For the CLI-8 Black, Yellow, Cyan and Magenta Cartridges- use the sliding bar guide attachment and put it on top of the chip resetter as shown in picture 1.

For the PGI-5 remove the slide guide and use the chip resetter with out the sliding guide as shown in picture 2.

Hold the cartridge with the chip facing the back of the chip resetter.

For the CLI-8
Put cartridge into the sliding guide

PGI-5 No slide guide is needed



Picture 1



Picture 2

Slide the cartridge down the slide and press the chip on the end of the cartridge against the pins in the chip resetter as shown in pictures 3, 4 and 5.



Picture 3



Picture 4



Picture 5

You will first get a short split second flash of the red LED light- this signals that a good contact is made. Hold for 2 - 3 seconds until the cartridge LED lights up red. The continuous red LED light (LED is in the cartridge) indicates that the resetting was successful. You can now remove the cartridge from the chip resetter.

For PGI-5: Do not use the sliding guide. Repeat the steps listed above. See pictures.

Trouble shooting:

- A) The pins of the resetter may not be making good contact with the chip.
- B) The cartridge or the chip you are attempting to reset may not be original Canon.
- C) The battery cell in the canon resetter may be spent. Replace the battery.