


Step-by-Step Instructions

(PRINT this set of instructions, to follow every time you refill your cartridge)

Canon PG 52 (#52) Photo

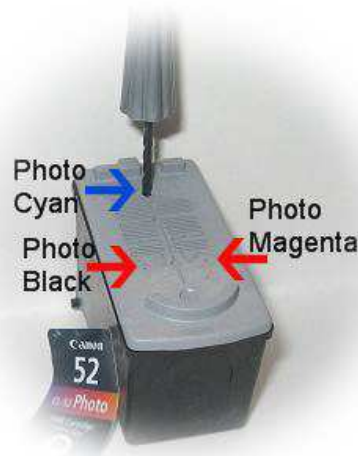

Fill Colors as Shown in Picture

Items needed: gloves, hand-drill, #8 refill station, black dye-based ink, photo cyan, photo magenta, paper towels, review hints & tips and check list. Note: Do not use the refill station lid for refilling this cartridge.

Syringe: Attach needle tip (located inside station # 4) to the syringe tightly. Unscrew lid on ink bottle. Puncture silver seal with needle tip making a small hole in the center of seal. Using the correct color pull the correct amount of ink into the syringe. Rinse syringe and needle tip after every use and before using syringe with another color. Rinse syringe and needle tip with water until the water runs clear.

Note: After refilling, your printer will read the cartridge as empty. You may have to hold down the paper- feed button for 5 seconds to override the ink level counter. Each time the cartridge is removed from the printer an "empty cartridge" message appears and blinking amber light will come on, on the printer. Holding the paper feed button down for 5 sec. will allow you to override the counter. Note: The use of our black dye-based ink to refill the photo black will result in slightly darker prints.

1.) Place cartridge in Station #8 with copper circuits facing to the left and the plastic feet inside the bottom of the station to your right. **Do not use the refill station lid for refilling this cartridge.** Peel back the label on top of the cartridge. Under label are three holes. These are your fill-holes. You will notice three small holes (too small for a syringe needle to get into). Drill each hole larger with the hand drill. Wash drill off after making each hole to avoid cross color contamination.

2.) Insert the correct color using the syringe deep inside of each of the fill-holes. See picture and fill colors as shown. A little ink might come out of the top when full, so cover up the other holes while filling one. S-l-o-w-l-y release thru the syringe 6 ml of ink into each of the three fill-holes. **As you inject the ink withdraw and re-insert the syringe at different angles in order to expose the whole sponge to the ink.** If ink begins to “bubble” out of the fill-hole, remove bottle tip. Bubbling occurs when a cartridge is either over-filled or if ink is being inserted too quickly. Wait several minutes and then try to s-l-o-w-l-y insert more ink. If ink begins to bubble out the fill hole or leak from the printhead, you have plenty of ink in the cartridge.

3.) After refilling, remove cartridge from refill station. Place cartridge upright on folded paper towels with the printhead facing down toward the paper towel. Do not let the printhead touch the paper towel. It maybe necessary to tilt the cartridge slightly so printhead is not in contact with paper towel. Let cartridge sit for approximately 20 minutes after refilling before putting cartridge back into printer.

For best results, let cartridge sit for 8 hours after refilling so the ink can saturate the entire sponge.

4.) Do not plug fill-hole. If fill-holes are plugged, a slight vacuum is created. This can result in interrupted print or no print.

5.) Check the ink flow by gently pressing a dry paper towel against the printhead. You should see 3 small lines of each color. If not, gently press a warm, wet paper towel against the printhead until each color is visible.

6.) When all 3 colors are visible on paper towel, place cartridge back into the printer and run 1 to 2 print tests. **Or Print 3 pages using:**

http://www.refills4you.com/support/black_print_test.html Black ink test

http://www.refills4you.com/support/color_print_test.html Color ink Test

PLEASE NOTE: If you have tried printing with your cartridge completely out of ink, you may have damaged the printhead. Inkjet printers work by heating a resistor inside the printhead which heats the ink before it is sprayed onto the paper. If there is no ink to keep the resistors cool, you stand the chance of frying them. In your worst case you will need to buy a new cartridge.

AccuBrite, Inc. is not affiliated with the listed printer manufacturers or their subsidiaries. The use by AccuBrite, Inc. does not imply endorsement by or association with the brand name owners. The listed manufacturers, printers and cartridges are used only for the purpose of showing the compatibility of this AccuBrite, Inc. product. All other trademarks, brand names and logos referenced in or on this product are the property of their respective owners. This material is protected by the copyright laws of the United States and other countries. It is illegal to reproduce these instructions. It may not be reproduced, distributed, or altered in any fashion by any entity (either internal or external to AccuBrite), except in accordance with applicable agreements or contracts of licensing, without the express written consent of AccuBrite, Inc.

Copyright © AccuBrite, Inc. 2003-2008. All rights reserved