

Chip Resetter Compatibility List for Epson Cartridges 5/21/08

| Item | Model | Used to following Printer |
|------|-------|--|
| 1 | T007 | EPSON PHOTO 780/790/870/890/895/1270/1280/1290/900 |
| 2 | T008 | EPSON PHOTO 780/790/870/890/895 |
| 3 | T009 | EPSON PHOTO 1270/1280/1290/900 |
| 4 | T015 | EPSON PHOTO 2000P |
| 5 | T016 | EPSON PHOTO 2000P |
| 6 | T017 | EPSON STYLUS C680/685/777 |
| 7 | T018 | EPSON STYLUS C680/685/777 |
| 8 | T0100 | EPSON TM-C100 |
| 9 | T026 | EPSON PHOTO 810/820/925/830U |
| 10 | T027 | EPSON PHOTO 810/820/925/830U |
| 11 | T028 | EPSON STYLUS C60/61/CX3100 |
| 12 | T029 | EPSON STYLUS C60/61/CX3100 |
| 13 | T036 | Epson Stylus C42UX/C44UX/C46 |
| 14 | T037 | Epson Stylus C42UX/C44UX/C46 |
| 15 | T038 | EPSON STYLUS C41/C43/C45/CX1500 |
| 16 | T039 | EPSON STYLUS C41/C43/C45/CX1500 |
| 17 | T040 | Epson Stylus CX3200/C62 |
| 18 | T041 | Epson Stylus CX3200/C62 |
| 19 | T057 | EPSON ME 100/1/1+ |
| 20 | T058 | EPSON ME 100/1/1+ |
| 21 | T066 | EPSON STYLUS C48 |
| 22 | T067 | EPSON STYLUS C48 |
| 23 | T0321 | EPSON STYLUS C70/C80/CX5100/CX5300 |
| 24 | T0322 | EPSON STYLUS C70/C80 |
| 25 | T0323 | EPSON STYLUS C70/C80 |
| 26 | T0324 | EPSON STYLUS C70/C80 |
| 27 | T0331 | EPSON STYLUS PHOTO 950 |
| 28 | T0332 | EPSON STYLUS PHOTO 950 |
| 29 | T0333 | EPSON STYLUS PHOTO 950 |
| 30 | T0334 | EPSON STYLUS PHOTO 950 |
| 31 | T0335 | EPSON STYLUS PHOTO 950 |
| 32 | T0336 | EPSON STYLUS PHOTO 950 |

| | | |
|----|-------|---|
| 33 | T0341 | EPSON STYLUS PHOTO 2100/2200 |
| 34 | T0342 | EPSON STYLUS PHOTO 2100/2200 |
| 35 | T0343 | EPSON STYLUS PHOTO 2100/2200 |
| 36 | T0344 | EPSON STYLUS PHOTO 2100/2200 |
| 37 | T0345 | EPSON STYLUS PHOTO 2100/2200 |
| 38 | T0346 | EPSON STYLUS PHOTO 2100/2200 |
| 39 | T0347 | EPSON STYLUS PHOTO 2100/2200 |
| 40 | T0348 | EPSON STYLUS PHOTO 2100/2200 |
| 41 | T0422 | EPSON STYLUS CX5100/CX5200/5300/5400/C82 |
| 42 | T0423 | EPSON STYLUS CX5100/CX5200/5300/5400/C82 |
| 43 | T0424 | EPSON STYLUS CX5100/CX5200/5300/5400/C82/C82N |
| 44 | T0431 | EPSON STYLUS CX6400/C84/C86/C64 |
| 45 | T0441 | EPSON STYLUS CX6400/C84/C86/C64/C66/CX4600/CX6600 |
| 46 | T0442 | EPSON STYLUS CX6400/C84/C86/C64/C66/CX4600/CX6600 |
| 47 | T0443 | EPSON STYLUS CX6400/C84/C86/C64/C66/CX4600/CX6600 |
| 48 | T0444 | EPSON STYLUS CX6400/C84/C86/C64/C66/CX4600/CX6600 |
| 49 | T0451 | EPSON STYLUS CX6600/C86/C66 |
| 50 | T0452 | EPSON STYLUS CX6600/C86/C66 |
| 51 | T0453 | EPSON STYLUS CX6600/C86/C66 |
| 52 | T0454 | EPSON STYLUS CX6600/C86/C66 |
| 53 | T0461 | EpsonStylus C63/65/C83/C85/CX3500/CX4500/CX6500/CX6300 |
| 54 | T0472 | EpsonStylus C63/65/C83/C85/CX3500/CX4500/CX6500/CX6300 |
| 55 | T0473 | EpsonStylus C63/65/C83/C85/CX3500/CX4500/CX6500/CX6300 |
| 56 | T0474 | EpsonStylus C63/65/C83/C85/CX3500/CX4500/CX6500/CX6300 |
| 57 | T0481 | EpsonStylusphoto RX500/RX600//RX620/R300/R300M/R220/R200/R340 |
| 58 | T0482 | EpsonStylusphoto RX500/RX600//RX620/R300/R300M/R220/R200/R340 |
| 59 | T0483 | EpsonStylusphoto RX500/RX600//RX620/R300/R300M/R220/R200/R340 |
| 60 | T0484 | EpsonStylusphoto RX500/RX600//RX620/R300/R300M/R220/R200/R340 |
| 61 | T0485 | EpsonStylusphoto RX500/RX600//RX620/R300/R300M/R220/R200/R340 |
| 62 | T0486 | EpsonStylusphoto RX500/RX600//RX620/R300/R300M/R220/R200/R340 |
| 63 | T0491 | EPSON PHOTO R210/R230/R310/R350/RX510 |
| 64 | T0492 | EPSON PHOTO R210/R230/R310/R350/RX510 |
| 65 | T0493 | EPSON PHOTO R210/R230/R310/R350/RX510 |
| 66 | T0494 | EPSON PHOTO R210/R230/R310/R350/RX510 |
| 67 | T0495 | EPSON PHOTO R210/R230/R310/R350/RX510 |

| | | |
|-----|-------|---|
| 68 | T0496 | EPSON PHOTO R210/R230/R310/R350/RX510 |
| 69 | T0541 | EPSON PHOTO R210/R230/R310/R350/RX510 |
| 70 | T0542 | EPSON PHOTO R210/R230/R310/R350/RX510 |
| 71 | T0543 | EPSON PHOTO R210/R230/R310/R350/RX510 |
| 72 | T0544 | EPSON PHOTO R210/R230/R310/R350/RX510 |
| 73 | T0547 | EPSON PHOTO R210/R230/R310/R350/RX510 |
| 74 | T0548 | EPSON PHOTO R210/R230/R310/R350/RX510 |
| 75 | T0549 | EPSON PHOTO R210/R230/R310/R350/RX510 |
| 76 | T0540 | EPSON PHOTO R210/R230/R310/R350/RX510 |
| 77 | T0551 | EPSON PHOTO RX420/RX425/R240/RX520 |
| 78 | T0552 | EPSON PHOTO RX420/RX425/R240/RX520 |
| 79 | T0553 | EPSON PHOTO RX420/RX425/R240/RX520 |
| 80 | T0554 | EPSON PHOTO RX420/RX425/R240/RX520 |
| 81 | T5570 | EPSON PICTUREMATE Print500 |
| 82 | T0561 | Epson Stylus RX430 Multifunction/Epson stylus photo R250 |
| 83 | T0562 | Epson Stylus RX430 Multifunction/Epson stylus photo R250 |
| 84 | T0563 | Epson Stylus RX430 Multifunction/Epson stylus photo R250 |
| 85 | T0564 | Epson Stylus RX430 Multifunction/Epson stylus photo R250 |
| 86 | T0591 | EPSON STYLUS PHOTO R2400 |
| 87 | T0592 | EPSON STYLUS PHOTO R2400 |
| 88 | T0593 | EPSON STYLUS PHOTO R2400 |
| 89 | T0594 | EPSON STYLUS PHOTO R2400 |
| 90 | T0595 | EPSON STYLUS PHOTO R2400 |
| 91 | T0596 | EPSON STYLUS PHOTO R2400 |
| 92 | T0597 | EPSON STYLUS PHOTO R2400 |
| 93 | T0598 | EPSON STYLUS PHOTO R2400 |
| 94 | T0599 | EPSON STYLUS PHOTO R2400 |
| 95 | T5591 | EPSON STYLUS PHOTO RX700 |
| 96 | T5592 | EPSON STYLUS PHOTO RX700 |
| 97 | T5593 | EPSON STYLUS PHOTO RX700 |
| 98 | T5594 | EPSON STYLUS PHOTO RX700 |
| 99 | T5595 | EPSON STYLUS PHOTO RX700 |
| 100 | T5596 | EPSON STYLUS PHOTO RX700 |
| 101 | T0601 | EPSON STYLUS C68/C88/ CX3800/ CX3810/CX4200/CX4800/CX7800 |
| 102 | T0602 | EPSON STYLUS C68/C88/ CX3800/ CX3810/CX4200/CX4800/CX7800 |

| | | |
|-----|-------|---|
| 103 | T0603 | EPSON STYLUS C68/C88/ CX3800/ CX3810/CX4200/CX4800/CX7800 |
| 104 | T0604 | EPSON STYLUS C68/C88/ CX3800/ CX3810/CX4200/CX4800/CX7800 |
| 105 | T0611 | EPSON STYLUS D88/DX3800/DX4800 |
| 106 | T0612 | EPSON STYLUS D88/DX3800/DX4800 |
| 107 | T0613 | EPSON STYLUS D88/DX3800/DX4800 |
| 108 | T0614 | EPSON STYLUS D88/DX3800/DX4800 |
| 109 | T0621 | EPSON STYLUS C67/C87/CX3700/CX4100/CX4700 |
| 110 | T0631 | EPSON STYLUS C67/C87/CX3700/CX4100/CX4700 |
| 111 | T0632 | EPSON STYLUS C67/C87/CX3700/CX4100/CX4700 |
| 112 | T0633 | EPSON STYLUS C67/C87/CX3700/CX4100/CX4700 |
| 113 | T0634 | EPSON STYLUS C67/C87/CX3700/CX4100/CX4700 |
| 114 | T0841 | Epson ME photo 20 |
| 115 | T0842 | Epson ME photo 20 |
| 116 | T0843 | Epson ME photo 20 |
| 117 | T0844 | Epson ME photo 20 |
| 118 | T0711 | Epson Stylus D78/DX4000/DX4050/DX5000/DX6000 |
| 119 | T0712 | Epson Stylus D78/DX4000/DX4050/DX5000/DX6000 |
| 120 | T0713 | Epson Stylus D78/DX4000/DX4050/DX5000/DX6000 |
| 121 | T0714 | Epson Stylus D78/DX4000/DX4050/DX5000/DX6000 |
| 122 | T0771 | EPSON STYLUS PHOTO R260/R380/RX580/R280 |
| 123 | T0772 | EPSON STYLUS PHOTO R260/R380/RX580/R280 |
| 124 | T0773 | EPSON STYLUS PHOTO R260/R380/RX580/R280 |
| 125 | T0774 | EPSON STYLUS PHOTO R260/R380/RX580/R280 |
| 126 | T0775 | EPSON STYLUS PHOTO R260/R380/RX580/R280 |
| 127 | T0776 | EPSON STYLUS PHOTO R260/R380/RX580/R280 |
| 128 | T0781 | EPSON STYLUS PHOTO R260/R380/RX580/R280 |
| 129 | T0782 | EPSON STYLUS PHOTO R260/R380/RX580/R280 |
| 130 | T0783 | EPSON STYLUS PHOTO R260/R380/RX580/R280 |
| 131 | T0784 | EPSON STYLUS PHOTO R260/R380/RX580/R280 |
| 132 | T0785 | EPSON STYLUS PHOTO R260/R380/RX580/R280 |
| 133 | T0786 | EPSON STYLUS PHOTO R260/R380/RX580/R280 |
| 134 | T0791 | EPSON STYLUS PHOTO 1400 |
| 135 | T0792 | EPSON STYLUS PHOTO 1400 |
| 136 | T0793 | EPSON STYLUS PHOTO 1400 |
| 137 | T0794 | EPSON STYLUS PHOTO 1400 |

| | | |
|-----|---------|--|
| 138 | T0795 | EPSON STYLUS PHOTO 1400 |
| 139 | T0796 | EPSON STYLUS PHOTO 1400 |
| 140 | T0801 | EPSON STYLUS PHOTO R265/R360/R285 |
| 141 | T0802 | EPSON STYLUS PHOTO R265/R360/R285 |
| 142 | T0803 | EPSON STYLUS PHOTO R265/R360/R285 |
| 143 | T0804 | EPSON STYLUS PHOTO R265/R360/R285 |
| 144 | T0805 | EPSON STYLUS PHOTO R265/R360/R285 |
| 145 | T0806 | EPSON STYLUS PHOTO R265/R360/R285 |
| 146 | T0881 | EPOSN STYLUS CX4400/CX7400/CX4450 |
| 147 | T0882 | EPOSN STYLUS CX4400/CX7400/CX4450 |
| 148 | T0883 | EPOSN STYLUS CX4400/CX7400/CX4450 |
| 149 | T0884 | EPOSN STYLUS CX4400/CX7400/CX4450 |
| 150 | IC1BK05 | Epson PM 800/800DC/820/820DC/3300C |
| 151 | IC5CL05 | Epson PM 800/800DC/820/820DC |
| 152 | IC5CL06 | Epson PM 3300C |
| 153 | IC1BK10 | Epson PM 900C/ 920C |
| 154 | IC6CL10 | Epson PM 900C/ 920C |
| 155 | IC1BK12 | Epson CC 500L/ 550L |
| 156 | IC3CL12 | Epson CC 500L/ 550L |
| 157 | IC1BK13 | PM-730C/740C/740DU/830C/840C/850PT/860PT |
| 158 | IC5CL13 | PM-730C/740C/740DU/830C/840C/850PT/860PT |
| 159 | ICBK21 | PM-930C/940C/950C/970C/980C |
| 160 | ICC21 | PM-930C/940C/950C/970C/980C |
| 161 | ICM21 | PM-930C/940C/950C/970C/980C |
| 162 | ICY21 | PM-930C/940C/950C/970C/980C |
| 163 | ICLC21 | PM-930C/940C/950C/970C/980C |
| 164 | ICLM21 | PM-930C/940C/950C/970C/980C |
| 165 | ICDY21 | PM-950C/970C/980C |
| 166 | ICBK22 | PX-V700. CC-600PX |
| 167 | ICC22 | PX-V700. CC-600PX |
| 168 | ICM22 | PX-V700. CC-600PX |
| 169 | ICY22 | PX-V700. CC-600PX |
| 170 | ICBK23 | PM-4000PX |
| 171 | ICC23 | PM-4000PX |
| 172 | ICM23 | PM-4000PX |

| | | |
|-----|--------|------------------------------|
| 173 | ICY23 | PM-4000PX |
| 174 | ICLC23 | PM-4000PX |
| 175 | ICLM23 | PM-4000PX |
| 176 | ICGY23 | PM-4000PX |
| 177 | ICMB23 | PM-4000PX |
| 178 | ICBK28 | CL-760 |
| 179 | ICCL28 | CL-760 |
| 180 | ICBK29 | CC-570 |
| 181 | ICCL29 | CC-570 |
| 182 | ICBK31 | PX-V600 |
| 183 | ICC31 | PX-V600 |
| 184 | ICM31 | PX-V600 |
| 185 | ICY31 | PX-V600 |
| 186 | ICBK32 | PM-A850/D750/G700/G800 |
| 187 | ICC32 | PM-A850/D750/G700/G800 |
| 188 | ICM32 | PM-A850/D750/G700/G800 |
| 189 | ICY32 | PM-A850/D750/G700/G800 |
| 190 | ICLC32 | PM-A850/D750/G700/G800 |
| 191 | ICLM32 | PM-A850/D750/G700/G800 |
| 192 | ICBK33 | PX-G900 |
| 193 | ICC33 | PX-G900 |
| 194 | ICM33 | PX-G900 |
| 195 | ICY3 | PX-G900 |
| 196 | ICBL33 | PX-G900 |
| 197 | ICR33 | PX-G900 |
| 198 | ICGL33 | PX-G900 |
| 199 | ICMB33 | PX-G900 |
| 200 | ICBK35 | PM-A900/D1000 |
| 201 | ICC35 | PM-A900/D1000 |
| 202 | ICM35 | PM-A900/D1000 |
| 203 | ICY35 | PM-A900/D1000 |
| 204 | ICBL35 | PM-A900/D1000 |
| 205 | ICR35 | PM-A900/D1000 |
| 206 | ICBK46 | Epson PX-A620/A720/A740/A780 |
| 207 | ICC46 | Epson PX-A620/A720/A740/A780 |

| | | |
|-----|--------|--|
| 208 | ICM46 | Epson PX-A620/A720/A740/A780 |
| 209 | ICY46 | Epson PX-A620/A720/A740/A780 |
| 210 | ICBK50 | Epson PM-D870/G850/A920/A820/G4500 |
| 211 | ICC50 | Epson PM-D870/G850/A920/A820/G4500 |
| 212 | ICM50 | Epson PM-D870/G850/A920/A820/G4500 |
| 213 | ICY50 | Epson PM-D870/G850/A920/A820/G4500 |
| 214 | ICLC50 | Epson PM-D870/G850/A920/A820/G4500 |
| 215 | ICLM50 | Epson PM-D870/G850/A920/A820/G4500 |
| | | |
| | | <p>AccuBrite, Inc. is not affiliated with the listed printer manufacturers or their subsidiaries. The use by AccuBrite, Inc. does not imply endorsement by or association with the brand name owners. The listed manufacturers, printers and cartridges are used only for the purpose of showing the compatibility of this AccuBrite, Inc. product. All other trademarks, brand names and logos referenced in or on this product are the property of their respective owners. This material is protected by the copyright laws of the United States and other countries. It is illegal to reproduce these instructions. It may not be reproduced, distributed, or altered in any fashion by any entity (either internal or external to AccuBrite), except in accordance with applicable agreements or contracts of licensing, without the express written consent of AccuBrite, Inc.</p> |
| | | |
| | | Copyright © AccuBrite, Inc. 2003-2008. All rights reserved |

