



Step-by-Step Instructions

(PRINT this set of instructions to follow every time you refill your cartridge)

Canon BC-10, BC-11e, BCI-10, BCI-11BK, BCI-11C, BCI-15BK, BCI-16C Apple M3910G/A


Items Needed: gloves, cardboard station #2, dye-based black ink, cyan ink, magenta ink, yellow ink, paper towels, review hints & tips and check list

Syringe: Attach needle tip (located inside station # 4) to the syringe tightly. Unscrew lid on ink bottle. Puncture silver seal with needle tip making a small hole in the center of seal. Using the correct color pull the correct amount of ink into the syringe. Rinse syringe and needle tip after every use and before using syringe with another color. Rinse syringe and needle tip with water until the water runs clear.

1. Put the cartridges on some paper towels in an area where you can tolerate a spill.

2. Turn the cartridge upside down so that the outlet port of the cartridge is facing upward.

3. **For Black** - Fill the syringe with 3 ml of black ink.
For Color - Fill a syringe with 2 ml of cyan ink, another syringe with 2 ml of magenta ink and a third syringe with 2 ml of yellow ink.

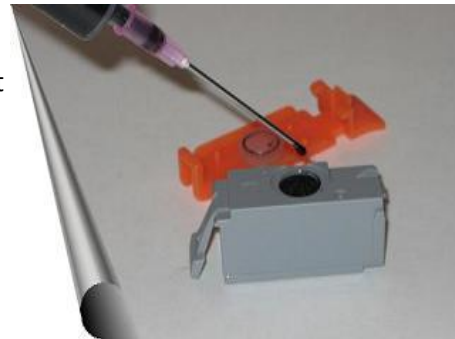

4. Slowly drip ink into the exposed sponge in the outlet port. The felt pad will quickly absorb the ink into the cartridge. If the felt pad will not soak up any more ink and the ink just sits on top then that chamber is full. BCI-10 and M3910 will take up to 6 ml in black chamber. BCI-11 will up to 2 ml in black chamber. Stop refilling when the sponge does not readily absorb the ink.

5. Dab a paper towel onto the felt pad to soak up any ink that did not get absorbed into the cartridge.

It goes without saying that you want to put the correct color into the correct chamber. Don't drip yellow ink onto the cyan felt pad and wonder why you are now getting green.

Note: Do not pierce the felt pad with the needle of the syringe.

6. Replace the cartridge and, IF NEEDED, run 1 - 3 cleaning cycles as per printer instructions.





Or print the following pages:

http://www.freeink4life.com/black_print_test.html

http://www.freeink4life.com/color_print_test.html

If necessary leave cartridge in printer for up to 4 hours to allow the ink to saturate the entire sponge.

Note: Immediately refill any empty cartridges.

AccuBrite, Inc. is not affiliated with the listed printer manufacturers or their subsidiaries. The use by AccuBrite, Inc. does not imply endorsement by or association with the brand name owners. The listed manufacturers, printers and cartridges are used only for the purpose of showing the compatibility of this AccuBrite, Inc. product. All other trademarks, brand names and logos referenced in or on this product are the property of their respective owners. This material is protected by the copyright laws of the United States and other countries. It is illegal to reproduce these instructions. It may not be reproduced, distributed, or altered in any fashion by any entity (either internal or external to AccuBrite), except in accordance with applicable agreements or contracts of licensing, without the express written consent of AccuBrite, Inc.

Copyright © AccuBrite, Inc. 2003-2010. All rights reserved